

Responding to Temperature Changes

CHAPTER PREVIEW

Heat is essentially the vibration of atoms in a material. Consequently, thermal properties reflect the type and strength of interatomic bonding and the crystal structure. The important thermal properties of any material are:

- Heat capacity
- Coefficient of thermal expansion
- Thermal conductivity

Thermal properties of ceramics differ from those of metals whenever the presence of free (conduction) electrons is involved, such as in thermal conductivity. However, heat transfer by phonon (lattice vibration) transport can in some cases be more effective than through the movement of electrons. We describe melting and vaporization of ceramics, as the temperatures for these transformations tends to be high. This can be critical in certain applications, such as the tiles on the space shuttle, but presents problems during processing. It should also be obvious by now that heat affects many of the properties of ceramics, such as Young's modulus, electrical conductivity, magnetic behavior, and dielectric constant. There are major applications that utilize the varied thermal properties of ceramics: from high thermal conductivity substrates for electronic packaging to enormous mirror blanks for telescopes that have "zero" expansion.

34.1 SUMMARY OF TERMS AND UNITS

Table 34.1 lists the important parameters we meet in this chapter and their units. The SI unit of temperature is kelvin (K), but as you have realized by now °C is often used in presenting data in materials science. As we mentioned in Chapter 1, the numerical value of a temperature difference or temperature interval expressed in °C is equal to the numerical value of the same temperature difference or interval when expressed in K. This point is worth remembering when you compare coefficients of thermal expansion or thermal conductivities for different materials.

34.2 ABSORPTION AND HEAT CAPACITY

When a solid absorbs an amount of heat, dq , its internal energy, E , rises by an amount dE where:

$$dE = dq \quad (34.1)$$

The increase in internal energy is largely due to the increased vibrational amplitude of the atoms about their equilibrium positions. This vibrational motion represents

the thermal energy of the solid. There are other mechanisms for heat absorption, but they are either negligible or absent entirely. However, we list them here and very briefly describe them because they relate to some concepts that have been described in earlier chapters, such as point defects.

- *Rotational*—This is important in liquids and gases where the molecules are free to rotate, but this contribution is negligible in solids.
- *Electronic*—Absorption by conduction electrons is very small, but it can be used to provide information about the electronic structure of a solid—so from that point of view it is useful.
- *Defect formation*—Formation of Frenkel and Schottky defects can contribute usually only at high temperatures.
- *Phase transformation*—This is absorption by structural, magnetic, and ferroelectric transformation in certain materials.

Heat capacity is a measure of the amount of energy required to raise the temperature of a material. At room temperature, the specific heat capacity of many ceramics is 0.75–1.0 J g⁻¹ K⁻¹. For example, granite (an igneous silicate rock) has a specific heat capacity of 0.79 J g⁻¹ K⁻¹

TABLE 34.1 Summary of Terms Used to Describe the Thermal Properties of Materials

Definition	Units/value
α Linear coefficient of thermal expansion	$^{\circ}\text{C}^{-1}$ or K^{-1}
C_v Heat capacity at constant volume	J/K
c_v Molar heat capacity at constant volume	$\text{Jmol}^{-1}\text{K}^{-1}$
C_p Heat capacity at constant pressure	J/K
c_p Molar heat capacity at constant pressure	$\text{Jmol}^{-1}\text{K}^{-1}$
ΔS_f Entropy of fusion	$\text{Jmol}^{-1}\text{K}^{-1}$ or $\text{Jg}\cdot\text{atom}^{-1}\text{K}^{-1}$
ΔS_v Entropy of vaporization	$\text{Jmol}^{-1}\text{K}^{-1}$ or $\text{Jg}\cdot\text{atom}^{-1}\text{K}^{-1}$
k Thermal conductivity	$\text{Wm}^{-1}\text{K}^{-1}$
T_b Boiling temperature	$^{\circ}\text{C}$ or K
T_m Melting temperature	$^{\circ}\text{C}$ or K
R_{TS} Thermal shock resistance	W/m
θ_D Debye temperature	$^{\circ}\text{C}$ or K
R Gas constant	$8.314 \text{ Jmol}^{-1}\text{K}^{-1}$

at 25°C , which means that it takes about 0.8 J of energy to raise the temperature of 1 g of granite by 1 K. Water has a specific heat capacity of $4.184 \text{ J g}^{-1} \text{ K}^{-1}$ at 25°C , a value that is more than five times greater than that of granite. This difference is crucial in regulating the earth's temperature. It takes five times more energy to increase the temperature of water by 1 K than it does to increase the temperature of granite. If the earth's surface were composed entirely of rock (i.e., there were no oceans) then daytime temperatures would be extremely high. The oceans also help limit the temperature drop at night because they have absorbed more energy during the day, which is released at night. If the earth had no oceans, temperature swings between day and night would be very large.

When referring to heat capacity, and in particular when you consult various other sources, it is necessary to be a little bit careful about terminology. Here are the definitions of all the terms you're likely to meet.

- **Heat capacity.** The amount of heat required to change the temperature of an object by one kelvin. The units of heat capacity are J/K.
- **Specific heat capacity.** The amount of heat required to change the temperature of 1 g of a substance by 1 K. The units of specific heat capacity are $\text{Jg}^{-1} \text{ K}^{-1}$.
- **Molar heat capacity.** The amount of heat required to change the temperature of 1 mol of a substance by 1 K. The units of molar heat capacity are $\text{Jmol}^{-1} \text{ K}^{-1}$.

In the literature you find that "heat capacity" is often used to describe all three terms, but it is usually obvious from the units given what term is actually

HEAT CAPACITY

For most ceramics heat capacity reaches $3nR$ by $1,000^{\circ}\text{C}$; n is the number of atoms per formula unit.

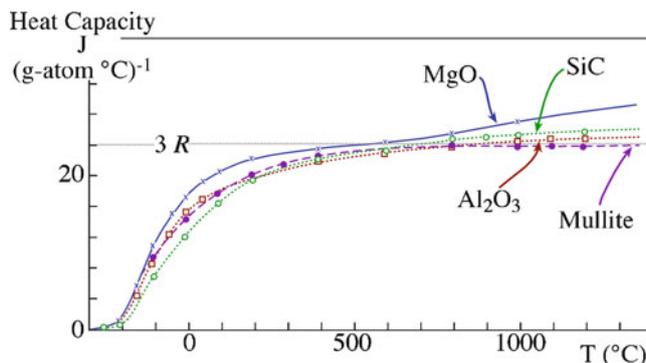


FIGURE 34.1. Heat capacity of some ceramics as a function of temperature.

the correct one to use. The next term is really the confusing one. Fortunately, it is not used now but it does occur from time to time in some of the older literature, so beware.

- **Specific heat.** The ratio of the heat capacity of a substance to the heat capacity of water. This term is a unitless ratio and was used when the heat capacity of water was unity. In the SI system of units, the heat capacity of water is not 1.

Heat capacities of solids are always functions of temperature, as illustrated for several ceramics in Figure 34.1. Note that the units are $\text{J}\cdot\text{g}\cdot\text{atom}^{-1} \text{ K}^{-1}$. At absolute zero, the internal energy of a solid is minimum, and the heat capacity is zero. As the temperature is raised, the heat capacity increases and is indicative of the various mechanisms by which energy is absorbed. The heat capacity approaches a classical limit of $3R$ ($\sim 25 \text{ Jmol}^{-1} \text{ K}^{-1}$) at a sufficiently high temperature that differs from one solid to another. This limit is the Dulong-Petit law. The crystal structure and composition of a material do not appreciably affect heat capacity, but n does: for example, c_p is $3R$ for Cu but $6R$ for MgO.

The temperature at which the heat capacity becomes constant, or only slightly varying with temperature, is the Debye temperature, θ . Values of θ are typically in the range $T_m/5$ – $T_m/2$ and depend on:

- Bond strength
- \mathcal{E}
- T_m

For example, in diamond, where the covalent bonds are very strong, θ is $\sim 2,000 \text{ K}$. On the other hand, the value of θ_D for NaCl is 281 K .

Abrupt changes in heat capacity are observed over a narrow temperature range when a material undergoes a structural transformation or some

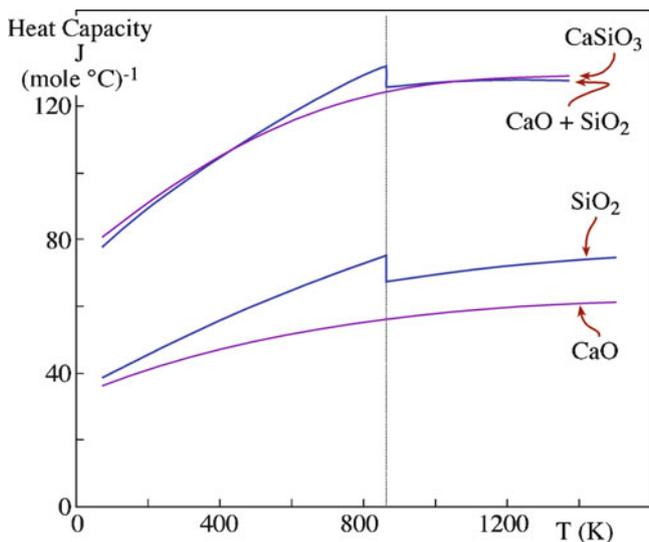


FIGURE 34.2. Heat capacity of SiO_2 as a function of temperature.

other change in order. The example shown in Figure 34.2 is for quartz (a polymorph of SiO_2), which undergoes a displacive $\alpha - \beta$ phase transformation at 573°C . Similar changes in heat capacity occur in glasses at the glass transition temperature, T_g , because of the increase in configurational entropy in the liquid. Anomalous heat capacities are also associated with the alignment of magnetic dipoles in ferromagnetic materials and the alignment of electric dipoles in ferroelectrics.

The heat capacity of a material can be calculated, depending on the temperature range of interest, using one of two equations. At very low (cryogenic) temperatures:

$$c_p \cong c_v = K \left(\frac{T}{\theta_D} \right)^3 + \gamma T \quad (34.2)$$

where K is a constant equal to $1,940 \text{ J mol}^{-1} \text{ K}^{-1}$, and γ is the electronic heat capacity coefficient. Values of θ_D and γ are tabulated in several lists of thermodynamics properties. These values are generally widely available for metals but somewhat more obscure for most ceramics. The overall contribution of equation 34.2 to the heat capacity of a material is small and is really of importance only if you wish to obtain a fundamental understanding about the nature of a material or if you are designing systems to operate at cryogenic temperatures.

At high temperature (usually above room temperature), heat capacities can be calculated using the empirical relation:

$$c = a + bT + cT^{-2} \text{ J mol}^{-1}\text{K}^{-1} \quad (34.3)$$

where a , b , and c are “constants” that have been tabulated for a wide range of materials.

34.3 MELTING

One of the very useful properties of many ceramics is their high T_m , as shown in Table 34.2. This property makes ceramics without equal for application at high temperature, such as refractories and thermal barrier coatings. There is a direct correlation between T_m and bond strengths. Also, ceramics with the highest values of T_m tend to have a significant fraction of covalent character to their bonding, as shown in Table 34.3; this table is calculated using equation 4.24 and values of Pauling electronegativities given in Figure 3.4. However, T_m does not correlate directly with the fraction of covalent character of the bond or the ionic potential (ϕ) of the cation, as shown for the oxides of the alkaline earth elements in Table 34.4, which are calculated in the same manner. (The values of ionic radii are given in Table 4.6.)

Compounds with very high fractions of ionic character to their bonds (e.g., alkali halides NaCl and LiF) tend to have lower values of T_m than their corresponding oxides. The reason is the greater ionic charges (e.g., O^{2-} rather than Cl^-) involved, and hence the stronger electrostatic attraction. We can illustrate this point for the two compounds Li_2O and LiF . Bond energies for ionic compounds can be obtained using equation 34.1 (this is simply the Born-Landé equation given in Chapter 4 written for a single bond).

$$E_{\text{bond}} = \frac{Z_1 Z_2 e^2}{4\pi\epsilon_0 r_0} \left(1 - \frac{1}{n} \right) \quad (34.4)$$

For Li_2O we have $r_{\text{Li}^+} = 0.068 \text{ nm}$ and $r_{\text{O}^{2-}} = 0.140 \text{ nm}$, so $r_0 = 0.208 \text{ nm}$. Taking $n = 10$ and substituting into equation 34.4, we get a value of $E_{\text{bond}} = 1.997 \times 10^{-18} \text{ J}$.

For LiF we have $r_{\text{Li}^+} = 0.068 \text{ nm}$ and $r_{\text{F}^-} = 0.133 \text{ nm}$, so $r_0 = 0.201 \text{ nm}$. Taking $n = 10$ and substituting into equation 34.4, we get a value of $E_{\text{bond}} = 1.033 \times 10^{-18} \text{ J}$.

So we would expect Li_2O to have a higher T_m than LiF ; and if you look at Table 34.2, you’ll see that for Li_2O $T_m = 1,570^\circ\text{C}$ whereas that for LiF $T_m = 848^\circ\text{C}$.

The entropy difference between the solid and the liquid at T_m is:

$$\Delta S_f = \frac{\Delta H_f}{T_m} \quad (34.5)$$

Values of ΔS_f are shown in Table 34.2. They are positive because the liquid is always more disordered than the solid, but they vary considerably from the empirical prediction known as Richard’s rule. Richard’s rule holds fairly well for many elements (e.g., Au , Ti , Pb , Na , K , B) but not for compounds.

TABLE 34.2 T_m and ΔS_f for Selected Ceramics

Compound	T_m (°C)	ΔS_f (Jmol ⁻¹ °C ⁻¹)	Compound	T_m (°C)	ΔS_f (Jmol ⁻¹ °C ⁻¹)
Oxides					
Al ₂ O ₃	2,054 ± 6	47.70	Mullite	1,850	
BaO	2,013	25.80	Na ₂ O (α)	1,132	33.90
BeO	2,780 ± 100	30.54	Nb ₂ O ₅	1,512 ± 30	58.40
Bi ₂ O ₃	825		Sc ₂ O ₃	2,375 ± 25	
CaO	2,927 ± 50		SrO	2,665 ± 20	25.60
Cr ₂ O ₃	2,330 ± 15	49.80	Ta ₂ O ₅	1,875 ± 25	
Eu ₂ O ₃	2,175 ± 25		ThO ₂	3,275 ± 25	
Fe ₂ O ₃	Decomposes at 1,735 K to Fe ₃ O ₄ and oxygen		TiO ₂ (rutile)	1,857 ± 20	31.50
Fe ₃ O ₄	1,597 ± 2	73.80	UO ₂	2,825 ± 25	
Li ₂ O	1,570	32.00	V ₂ O ₅	2,067 ± 20	
Li ₂ ZrO ₃	1,610		Y ₂ O ₃	2,403	≈38.70
Ln ₂ O ₃	2,325 ± 25		ZnO	1,975 ± 25	
MgO	2,852	25.80	ZrO ₂	2,677	29.50
Halides					
AgBr	434		LiBr	550	
AgCl	455		LiCl	610	22.60
CaF ₂	1,423		LiF	848	
CsCl	645	22.17	LiI	449	
KBr	730		NaCl	800	25.90
KCl	776	25.20	NaF	997	
KF	880		RbCl	722	23.85
Silicates and other glass-forming oxides					
B ₂ O ₃	450 ± 2	33.20	Na ₂ Si ₂ O ₅	874	31.00
CaSiO ₃	1,544	31.00	Na ₂ SiO ₃	1,088	38.50
GeO ₂	1,116		P ₂ O ₅	569	
MgSiO ₃	1,577	40.70	SiO ₂ (high quartz)	1,423 ± 50	4.6
Mg ₂ SiO ₄	1,898	32.76			
Carbides, nitrides, borides, silicides					
B ₄ C	2,470 ± 20	38.00	ThN	2,820	
HfB ₂	2,900		TiB ₂	2,897	
HfC	3,900		TiC	3,070	
HfN	3,390		TiN	2,947	
HfSi	2,100		TiSi ₂	1,540	
MoSi ₂	2,030		UC	2,525	
NbC	3,615		UN	2,830	
NbN	2,204		VB ₂	2,450	
SiC	2,837		VC	2,650	
Si ₃ N ₄	At 2,151 K partial pressure of N ₂ over Si ₃ N ₄ reaches 1 atm		VN	2,177	
			WC	2,775	
			ZrB ₂	3,038	
TaB ₂	3,150		ZrC	3,420	
TaC	3,985		ZrN	2,980 ± 50	
TaSi ₂	2,400		ZrSi ₂	1,700	
ThC	2,625				


TABLE 34.3 Predominantly Covalent Ceramics With Very High Melting Temperatures

Ceramic	T_m (°C)	Covalent character of bond (%)
HfC	3,890	70
TiC	3,100	78
WC	2,775	85
B ₄ C	2,425	94
SiC	2,300	88
C (diamond)	3,727	100

TABLE 34.4 Melting Temperatures of Alkaline Earth Metal Oxides

Oxide	T_m (°C)	Covalent character (%)	ϕ (nm ⁻¹) = Z/r
BeO	2,780	37	57
MgO	2,852	27	28
CaO	2,927	21	20
SrO	2,665	21	17
BaO	2,017	18	15


We can consolidate the values in Table 34.2 with Richard's rule by considering the processes involved when a compound, AB , melts. Overall melting reaction:

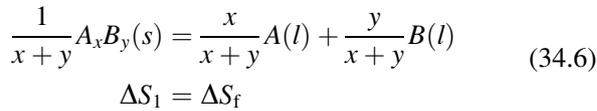

This reaction can be broken down into two steps. First,

$$\frac{1}{x+y}A_xB_y(s) = \frac{1}{x+y}A_xB_y(l) \quad (34.7)$$

which gives ΔS_2 and corresponds to a hypothetical melting process where the compound retains its ordered structure in the liquid phase. This step is followed by:

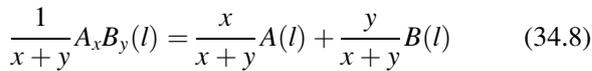

which gives $\Delta S_3 = \Delta S_m$ and represents disordering of the compound in the liquid to form a random solution. For this latter step, the entropy change is given by the "entropy of mixing," which is:

$$\Delta S_m = -R[X_A \ln X_A + X_B \ln X_B] \quad (34.9)$$

where X_A and X_B are the atom fractions of A and B, respectively. For our particular example, we can write the entropy of mixing as:

$$\Delta S_3^0 = -R \left[\frac{x}{x+y} \ln \left(\frac{x}{x+y} \right) + \frac{y}{x+y} \ln \left(\frac{y}{x+y} \right) \right] \quad (34.10)$$

The entropies associated with each of the melting reactions given above are related as follows.

$$\Delta S_1 = \Delta S_2 + \Delta S_3 \quad (34.11)$$

We now apply this approach to a real compound, MgO.

The entropy of fusion for MgO, given in Table 34.2, is $\Delta S_f = 12.9 \text{ J g-atom}^{-1}\text{C}^{-1}$ (i.e., $\Delta S_1 = 12.9 \text{ J g-atom}^{-1}\text{C}^{-1}$). The entropy of mixing, ΔS_3 , can be calculated from equation 34.7 as:

$$\Delta S_3^0 = -8.314 \left[\frac{1}{2} \ln \left(\frac{1}{2} \right) + \frac{1}{2} \ln \left(\frac{1}{2} \right) \right]$$

$$= -8.314 \ln \left(\frac{1}{2} \right) = 5.76 \text{ Jg.atom}^{-1}\text{K}^{-1} \quad (34.12)$$

which, using equation 34.11, gives the entropy for the hypothetical melting reaction of $7.14 \text{ J g-atom}^{-1}\text{C}^{-1}$. This value, which is closer to Richard's rule, does not consider a mixing contribution but only the vibrational change on melting such as occurs for an element. By assuming that, we can apply Richard's rule as shown above that it is possible to determine ΔS_1 (ΔS_f) where such values are not available in the literature and hence obtain ΔH_f .

RICHARD'S RULE
 $\Delta S_f = 8.4 \text{ J g.atom}^{-1} \text{K}^{-1}$

34.4 VAPORIZATION

Most ceramics have very high T_b . Consequently, their vapor pressures are negligible at room temperature and become appreciable only at high temperature. Also, very few ceramics vaporize without molecular change. The result is that the vapor composition is usually not the same as that of the original liquid or solid. A practical consequence is that when we try to grow ceramic thin films by evaporation as described in Chapter 28, the film may have a different stoichiometry than that of the source. Some of the phenomena that can occur when compounds evaporate are shown in Table 34.5.

In many multicomponent oxide ceramics, the vapor pressure of each component may be different. This effect is particularly noticeable in lead-containing compounds, such as lead zirconium titanate (PZT), an important piezoelectric ceramic. PZT contains PbO, ZrO₂, and TiO₂ in the form of a solid solution. PbO is significantly more volatile than the other two oxides (Table 34.6). As a result, if PZT films are heated during processing, significant Pb loss can occur, leading to a change in film stoichiometry and dramatically different properties. If Pb loss is to be avoided, special precautions must be taken. For example, we can compensate for Pb loss by making our starting films Pb-rich.

34.5 THERMAL CONDUCTIVITY

At all temperatures, the atoms in a solid are vibrating about their equilibrium positions with a set of characteristic frequencies, ν , with values as high as 10^{12} Hz at room temperature. The energies of the lattice vibrations are quantized and given by:

$$E = \left(n + \frac{1}{2} \right) h\nu \quad (34.13)$$

TABLE 34.5 Possible Reactions During the Evaporation of Compounds

Reaction type	Chemical reaction	Examples	Comments
Evaporation without dissociation	$\text{MX}(s \text{ or } l) \rightarrow \text{MX}(g)$	SiO, B ₂ O ₃ GeO, SnO, AlN CaF ₂ , MgF ₂	Compound stoichiometry maintained in deposit
Decomposition	$\text{MX}(s) \rightarrow \text{M}(s) + (1/2)\text{X}_2(g)$ $\text{MX}(s) \rightarrow \text{M}(l) + (1/n)\text{X}_n(g)$	Ag ₂ S, Ag ₂ Se III-V semiconductors	Separate sources are required to deposit these compounds
Evaporation with dissociation			
a. Chalcogenides X = S, Se, Te	$\text{MX}(s) \rightarrow \text{M}(g) + (1/2)\text{X}_2(g)$	CdS, CdSe CdTe	Deposits are metal-rich; separate sources are required to deposit these compounds
b. Oxides	$\text{MO}_2(s) \rightarrow \text{MO}(g) + (1/2)\text{O}_2(g)$	SiO ₂ , GeO ₂ TiO ₂ , SnO ₂ ZrO ₂	Metal-rich discolored deposits; dioxides are best deposited in O ₂ partial pressure (reactive evaporation)

M metal, X nonmetal

TABLE 34.6 Temperature at Which the Vapor Pressure is 10⁻⁴ torr (1.3 × 10⁻² Pa)

Oxide	T _m (°C)	T (vapor pressure = 10 ⁻⁴ torr) (°C)
PbO	890	550
TiO ₂	1,640	~1,300
ZrO ₂	2,700	~2,200

where n is an integer, which is zero at 0 K; and h is Planck's constant. At absolute zero, the atoms have $E = hv/2$: the zero point energy. If the solid is heated, E increases in integer steps of hv ; and, similarly, if the solid is cooled, the vibrational energy decreased in steps of hv . You can see immediately that there is a similarity between this process and the absorption or emission of light (*photons*). Thus, the name *phonon* is used as the quantum unit of lattice vibrational energy.

Wave-particle duality applies equally to phonons as it does to photons. Thus, phonons possess the characteristics of both waves and particles. In ceramics, the conduction of heat is primarily due to the movement of phonons. When a ceramic is heated, we can think in terms of an increase in the number of phonons. When there is a temperature difference, phonons move from the high temperature end, where their concentration is high, to the lower temperature end, where they are fewer. The driving force is the concentration gradient, just as it is in the diffusion of matter. The rate of heat flow, dq/dt , is

proportional to the temperature gradient, dT/dx , where the constant of proportionality is the thermal conductivity, k .

$$\frac{dq}{dt} = -kA \frac{dT}{dx} \quad (34.14)$$

where A is the cross-sectional area normal to the direction of heat flow.

Thermal conductivity depends on three factors:

- Heat capacity C
- Average particle velocity, v
- Mean free path of a particle between collisions, l

From the kinetic theory of gases, the thermal conductivity of an ideal gas is:

$$k = \frac{1}{3}Cvl \quad (34.15)$$

Debye (in 1914) applied equation 34.15 to phonon conduction to describe thermal conductivity in dielectric solids. Then, C is the heat capacity of the phonons, v is the phonon velocity, and l is the phonon mean free path.

Phonon conduction in ceramics is very different to that found in metals, where the free electrons are the source of the thermal conductivity. The mobility of phonons is usually significantly lower than that of electrons because they are scattered by lattice vibrations (i.e., other phonons). Consequently, ceramics generally

VIBRATIONAL AMPLITUDES

In a solid may be as large as 0.02–0.03 nm.

v AND l FOR ELECTRONS AND PHONONS

For electrons in a metal at room temperature, $v \sim 10^6$ m/s and $l \sim 10$ nm.

For phonons in a ceramic at room temperature, $v \sim 10^3$ m/s and $l \sim 1\text{--}4$ nm.

Phonon mean free path greatly increases with decreasing temperature; it's ~ 10 μm at 20 K.

TABLE 34.7 Thermal Conductivity of Some Ceramics

Material	k ($W m^{-1} K^{-1}$)	Material	k ($W m^{-1} K^{-1}$)
Al_2O_3	30.0–5.0	Spinel ($MgAl_2O_4$)	12.0
AlN	200.0–280.0	Soda-lime-silicate glass	1.7
BeO	63.0–216.0	TiB ₂	40.0
MgO	37.0	PSZ	2.0
SiC	84.0–93.0	SiAlON	21.0
SiO ₂	1.4	Si ₃ N ₄	25.0
Cordierite (Mg-aluminosilicate)	4.0	Forsterite	3.0

have low thermal conductivities. However, the phonon mechanism can be very effective, and it is often a surprise to realize that the thermal conductivity of some ceramics is actually higher than that of metals! At temperatures above ~50 K, diamond has the highest thermal conductivity of any known material. The thermal conductivity of gem-quality diamond is in the range 2,000–2,500 $W m^{-1} K^{-1}$ at room temperature, whereas that of copper is 400 $W m^{-1} K^{-1}$. Values for the room temperature thermal conductivity of some selected ceramics are given in Table 34.7.

Ceramics having high thermal conductivities generally share the following characteristics.

- Strong interatomic bonding
- Simple crystal structure
- Comprised of light elements that are close together in the periodic table

From Table 34.7 you can see that BeO and AlN are examples of ceramics with high thermal conductivity, and both of these materials satisfy the conditions given above.

Figure 34.3 shows the thermal conductivity of single-crystal alumina as a function of temperature. At very low temperatures, the mean free path, l , of the phonons becomes comparable to the size of the specimen, and k depends mainly on the heat capacity, which increases as T^3 . The thermal conductivity reaches a maximum at some low temperature (~40 K in this case). As the temperature increases, k decreases because there are more phonons around to collide with and more chances of a scattering event taking place. The interactions between phonons was first described by Rudolf Peierls (1929), who identified two types of scattering processes.

- Umklapp (from the German *umklappen*, which means “flipping over”)
- Normal

The normal process has no effect on the thermal resistance. On the other hand, the umklapp process leads to an increase in thermal resistance with temperature given by:

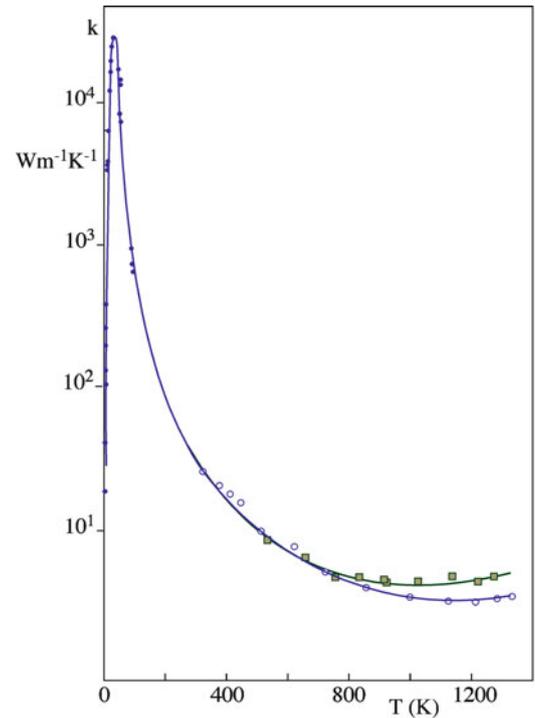


FIGURE 34.3. Thermal conductivity of single-crystal aluminum oxide over a wide temperature range.

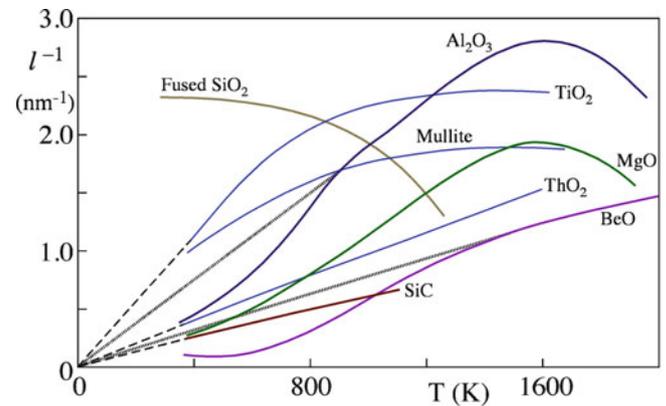


FIGURE 34.4. Inverse phonon mean free paths for several crystalline oxides and vitreous silica.

$$l \propto \frac{1}{T} \tag{34.16}$$

Eventually, l decreases to a value close to the interplanar spacing; and k , due to phonon transport, becomes temperature-independent. The temperature variation of l for several ceramics is shown in Figure 34.4.

At high temperatures, part of the thermal energy may also be transferred by radiation. The radiant energy conductivity, k_r , is given by:

$$k_r = \frac{16}{3} \sigma n^2 T^3 l_r \tag{34.17}$$

σ is the Stefan-Boltzmann constant, n is the refractive index, and l_r is the mean free path of the photons responsible for radiant heat transfer.

Some single crystals and glasses have good transparency in the visible and infrared (IR) parts of the electromagnetic spectrum, and l_r can become large. In most polycrystalline ceramics, l_r is very short because of absorption and scattering, mainly due to the presence of pores. For opaque materials, $l_r \sim 0$, and radiation transfer is negligible except at very high temperatures.

At the other extreme, when l_r is very large, there is no interaction with the material; and radiation heat transfer becomes a surface effect. The contribution of k_r to the overall thermal conductivity becomes significant only when l_r is small compared with the sample size but large compared with atomic dimensions.

In ceramics with mobile electrons or holes, there is a third mechanism that can contribute to the thermal conductivity. The electronic thermal conductivity k_e is:

$$k_e \propto \exp\left(-\frac{E_g}{kT}\right) \quad (34.18)$$

where E_g is the band gap energy, and k is Boltzmann's constant.

In most ceramics, the electronic contribution to the overall thermal conductivity is negligible. However, it can be significant in electrically conducting and semiconducting ceramics, such as SiC, TiC, and graphite.

34.6 MEASURING THERMAL CONDUCTIVITY

There are several methods available to measure k , but no single one is appropriate for all ceramics because of their wide range of thermal conductivities. The laser flash method, illustrated in Figure 34.5, is one of the most

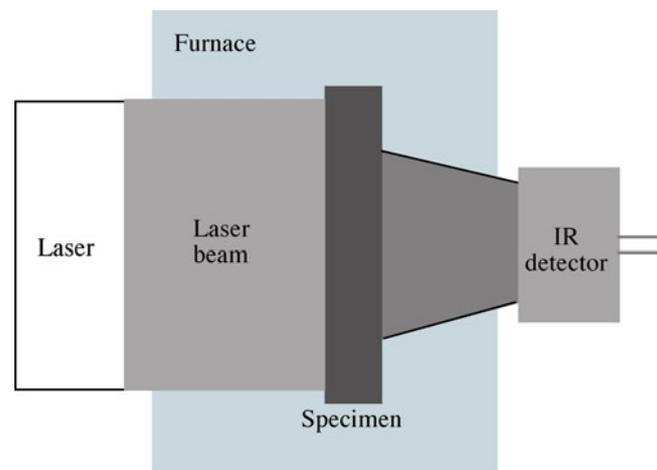


FIGURE 34.5. Laser flash method used for measuring thermal conductivity of ceramics.

popular. In this technique, a laser pulse is used to rapidly heat one face of the ceramic, which is in the form of a thin plate. A typical laser would be a Nd:glass laser producing radiation with $\lambda \sim 1,060$ nm. The energy of each laser pulse is ~ 15 J. An IR detector measures the temperature of the face remote from the laser. The time taken for the peak in the temperature profile to reach the remote face of the sample and the reduction in the peak temperature are measured. These measurements provide us with the thermal diffusivity, D_{th} , and the heat capacity, c_p . If the density, ρ , of the ceramic is known, then k can be obtained using:

$$k = \rho c_p D_{th} \quad (34.19)$$

The measurements can be performed at room temperature or at a range of higher temperatures by enclosing the sample in a furnace.

34.7 MICROSTRUCTURE AND THERMAL CONDUCTIVITY

As we mentioned in Chapter 1, thermal conductivity depends on microstructure. Anything that changes the local atomic arrangement or induces elastic strains in the lattice decreases k .

- **Impurities.** The presence of impurities disrupts the normal lattice arrangement. As temperature increases, the effect of the impurity becomes less because l approaches the dimensions of the unit cell. The effect on k is illustrated for solid solutions in the isomorphous system MgO–NiO in Figure 34.6.
- **Porosity.** The thermal conductivity of air is only $0.026 \text{ Wm}^{-1} \text{ K}^{-1}$, significantly less than most crystalline ceramics. Consequently, ceramics containing a high volume fraction of porosity have low values of k . This property is used to good effect in designing materials for thermal insulation, such as the tiles used on the outside of the space shuttle to protect it during reentry into the earth's atmosphere. The tiles consist of a porous mat of SiO_2 fibers, as we showed earlier in Figure 15.19. The SiO_2 provides the high strength and high melting temperature requirements of the tile, and the porous microstructure ensures a very low k .
- **Grain size.** The mean free path of phonons at room temperature is significantly smaller than typical grain sizes in ceramics. As a result, the phonon scattering at grain boundaries is not important in reducing k in most practical applications. Figure 34.7 shows the temperature dependence of k for CaF_2 , TiO_2 , and Al_2O_3 in single crystalline and polycrystalline form. The deviation in the relative thermal conductivities at higher temperatures is due to the contribution from photon conductivity.

- Dislocations.** A dislocation consists of a core where the structure and density of the material is altered. Around the core there is a long-range strain field. Both these regions can cause phonon scattering.

MgO

$l \sim 3 \text{ nm at } 200^\circ\text{C}$
 $l \sim 0.6 \text{ nm at } 1,000^\circ\text{C}$
 $a_{\text{MgO}} = 0.421 \text{ nm}$

The thermal resistance associated with dislocations is proportional to the dislocation density. There is no theory that so far accounts entirely satisfactorily for

the magnitude of phonon scattering by dislocations. If you want to delve into some of the theories that have been proposed, much of the original work has been discussed by Nabarro (1987).

Most practical ceramics are multiphase materials, where each constituent, in general, has a different k . The value of k for the heterogeneous material is dependent on the amount and distribution of the different phases.

There are three idealized kinds of phase distribution where equations have been derived to estimate k of the bulk material; they are illustrated in Figure 34.8, with examples summarized in Table 34.8.

For parallel slabs with heat flow parallel to the phase boundary:

$$k_m = V_1 k_1 + V_2 k_2 \quad (34.20)$$

where V_1 and V_2 are the volume fractions of the two phases.

For parallel slabs with heat flow perpendicular to the phase boundary:

$$k_m = \frac{k_1 k_2}{V_1 k_2 + V_2 k_1} \quad (34.21)$$

For a continuous major phase:

$$k_m = k_c \left[\frac{1 + 2V_d \left(1 - \frac{k_c}{k_d}\right) / \left(2\frac{k_c}{k_d} + 1\right)}{1 - V_d \left(1 - \frac{k_c}{k_d}\right) / \left(\frac{k_c}{k_d} + 1\right)} \right] \quad (34.22)$$

where k_c is the thermal conductivity of the continuous phase, k_d is the thermal conductivity of the dispersed phase, and V_d is the volume fraction of the dispersed phase.

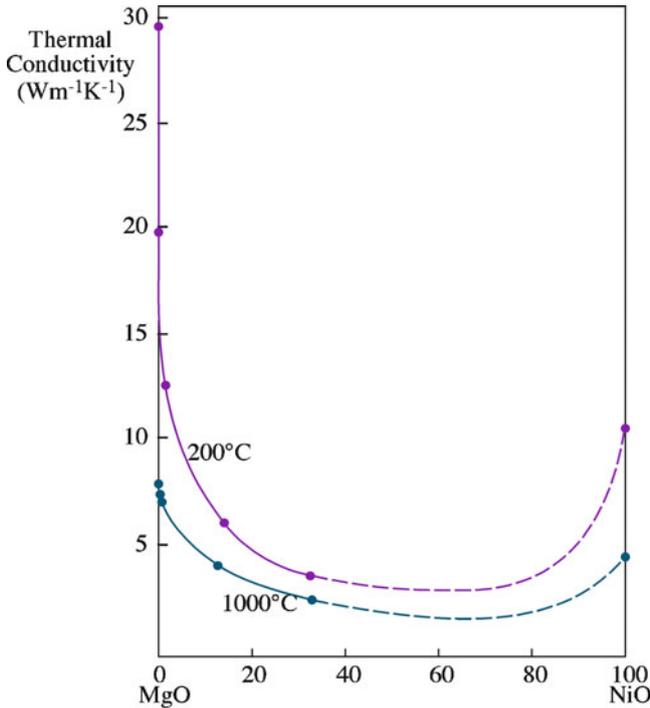


FIGURE 34.6. Thermal conductivities of solid solutions in the MgO–NiO system.

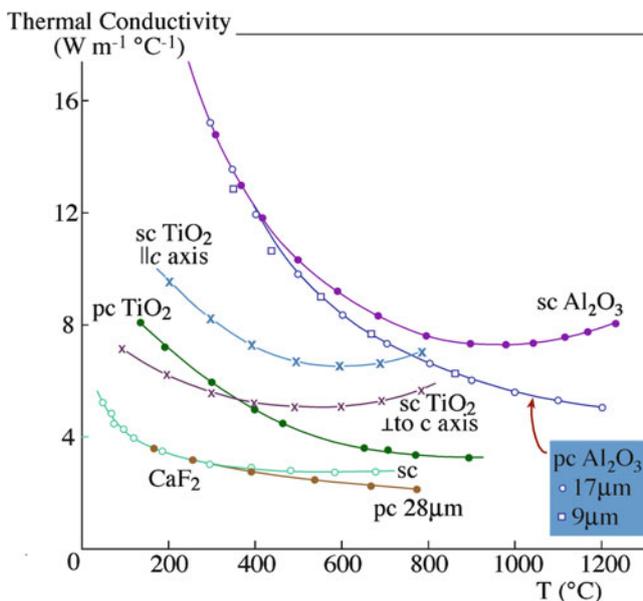


FIGURE 34.7. Comparison of the thermal conductivity of single-crystal (sc) and polycrystalline (pc) ceramics.

34.8 USING HIGH THERMAL CONDUCTIVITY

One of the most important applications for high- k ceramics is as substrates and packages for electronic devices, as shown in Figure 34.9. Due to the complexity and density of modern electronic devices, efficient thermal management is important. Removal of heat from the semiconductor is essential to prevent thermally induced damage.

Alumina (96 wt% Al_2O_3) is the most commonly used substrate material. It has a thermal conductivity in the range $15\text{--}20 \text{ Wm}^{-1} \text{ K}^{-1}$. The higher- k alternatives are AlN, SiC, and BeO. Aluminum nitride is the most promising because it combines a high k and high electrical

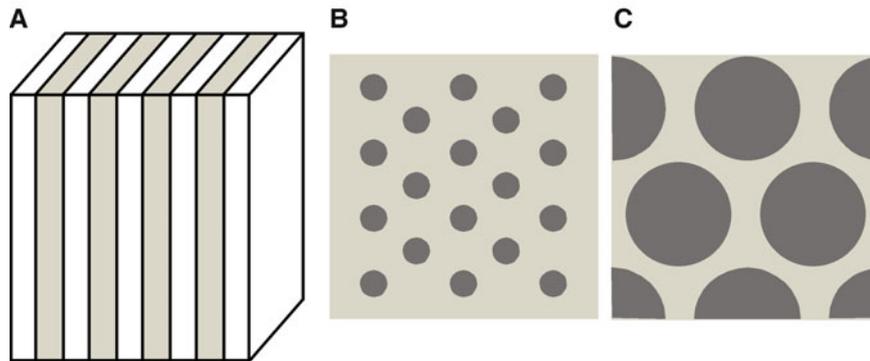


FIGURE 34.8. Three models for the distribution of two phases in a material. (A) Parallel slabs. (B) Continuous matrix phase, discontinuous particulate dispersion. (C) Large isolated grains separated by a continuous minor phase.

TABLE 34.8 Goes with Figure 34.8

<i>Parallel slabs</i>	<i>Continuous matrix</i>	<i>Continuous minor</i>
Furnace linings	Dispersed impurities	Common microstructure
Thermal barrier coatings	Common two-phase microstructure	Grain boundary phase
Cutting tool coatings	Dispersed-particle composites	Glass-bonded ceramic
Enamels	Immiscible phases	Cermet such as Co-bonded WC
Layered composites		Reaction-sintered SiC

resistivity (unlike SiC), is nontoxic (unlike BeO), and has a coefficient of thermal expansion closely matched to Si in the temperature range 25–400°C. Theoretically, AlN has $k = 320 \text{ W m}^{-1} \text{ K}^{-1}$. However, in polycrystalline AlN, k is typically in the range 50–200 $\text{W m}^{-1} \text{ K}^{-1}$. One of the reasons that commercially available materials show a wide range in k and values lower than predicted by theory is the presence of impurities, mainly oxygen. When oxygen replaces nitrogen, an aluminum vacancy is formed. We can represent this process using the Kröger-Vink notation (we gave the details of this notation in Chapter 11).



The aluminum vacancy leads to phonon scattering because its scattering cross section, Γ , for phonons is large: Γ is proportional to the relative difference in mass between the original site occupant and the new site occupant.

$$\Gamma \propto \frac{\Delta M}{M} \quad (34.24)$$

Aluminum has an atomic weight of 27, and the vacancy has zero weight. For our example, $\Delta M/M$ is one. When an N atom is replaced by O on the anion sublattice, $\Delta M/M = 0.1$. As a result, the scattering cross section is smaller.

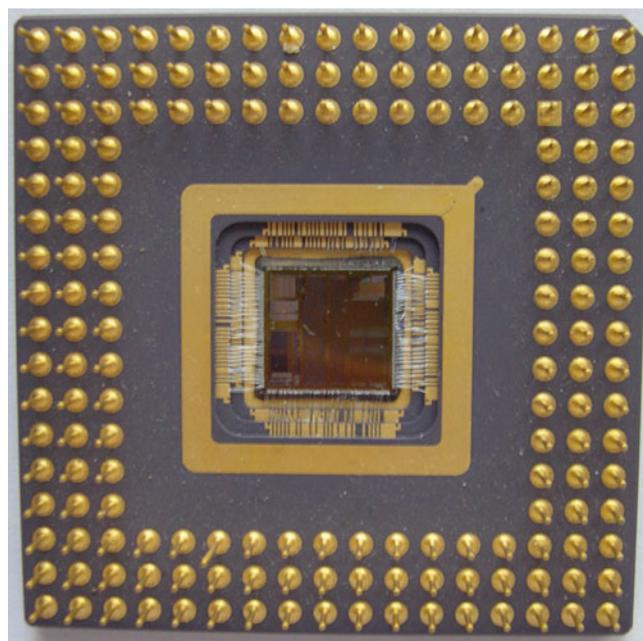


FIGURE 34.9. Ceramic pin-grid-array package (96 %-pure Al_2O_3) with multilayer Au metallization.

We can reduce the oxygen content in polycrystalline AlN by adding rare earth or alkaline metal oxides (e.g., Y_2O_3 and CaO) to the initial powder. During sintering, the additive reacts with the oxide coating on the AlN grains, forming a liquid. The liquid helps in densification (as described in Section 24.7) and also acts as an oxygen “getter,” removing Al_2O_3 from the bulk of the grains. During cooling, the liquid concentrates mainly at triple points, leaving mostly clean and sharp AlN–AlN GBs, as shown in Figure 1.4.

The record-high thermal conductivity of diamond makes it an obvious choice for consideration as a substrate for high-power electronic devices. One method that has been successful in producing diamond films is chemical vapor deposition (CVD). The CVD diamond films are polycrystalline but can still have $k > 2,000 \text{ W m K}^{-1}$. The high cost of diamond films still precludes their widespread use.

34.9 THERMAL EXPANSION

We know from our everyday experiences that when we heat most materials they expand and when we cool them they contract. The linear coefficient of thermal expansion, α , indicates how much the dimensions of a solid change with temperature

$$\alpha = \frac{\Delta l}{\Delta T l_0} \quad (34.25)$$

Δl is the change in the length of the sample, l_0 is the original length, and ΔT is the temperature interval.

Figure 34.10 shows a typical bond-energy curve. At 0 K, the atoms are separated by the equilibrium spacing, r_0 , which corresponds to the minimum in the bond-energy curve. The atoms are in their lowest vibrational energy state, corresponding to the zero point energy, $h\nu/2$, and possess the minimum amplitude of vibration, x_0 . When the solid is heated, its energy increases, as shown by the horizontal lines in Figure 34.10. The width of the trough in the bond-energy curve represents the average vibrational amplitude of the atoms for a specific energy (or temperature). The average distance between the atoms is represented by the mean position along this line. A solid expands when heated because the bond-energy curve is asymmetric. If the curve was symmetric (the dashed curve in Figure 34.10) the average vibrational amplitude would increase with increasing temperature, but there would be no increase in the interatomic separation.

As we described in Chapter 4, the shape of the bond-energy curve depends on the strength and type of the interatomic bonding.

AN EXAMPLE—MgO

$\alpha = 13.5 \times 10^{-6} \text{ }^\circ\text{C}^{-1} = 13.5 \text{ ppm}/^\circ\text{C}$

$\alpha(^\circ\text{C}^{-1}) \times 10^6 = 13.5; \alpha(10^6 \text{ }^\circ\text{C})^{-1} = 13.5$

Heating MgO from 25°C to 50°C ($\Delta T = 25^\circ\text{C}$) increases a (0.421 nm at 25 °C) by only 0.14 pm.

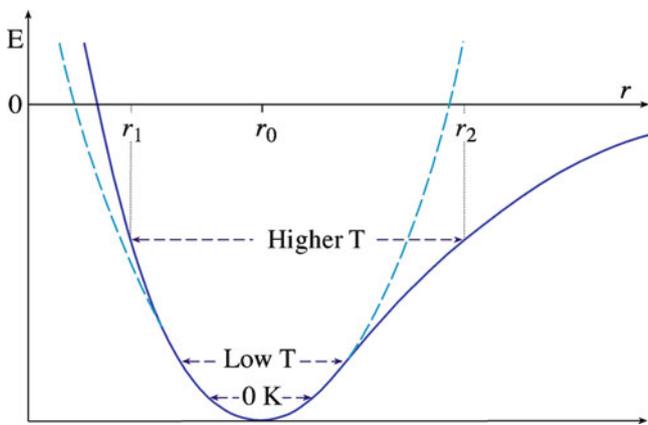


FIGURE 34.10. Typical bond-energy curve.

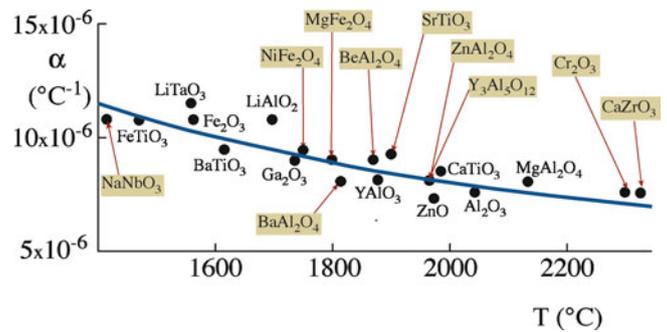


FIGURE 34.11. Plot of an average coefficient of thermal expansion versus melting temperature for many ceramics.

- The greater the bond strength, the deeper and narrower is the trough in the bond-energy curve and the smaller is the value of α .
- The more ionic the bonding, the more asymmetric is the curve. Ionically bonded materials, in general, have higher values of α than covalently bonded ones.
- As melting temperature increases, α decreases, as shown in Figure 34.11.

Values of α for various ceramics are given in Table 34.9. For most ceramics, α is about $3\text{--}15 \times 10^{-6} \text{ }^\circ\text{C}^{-1}$. As α is a function of temperature—usually increasing with increasing temperature, as shown in Figure 34.12—a

mean value is often quoted for a particular material over a stated temperature range. Table 34.8 shows the mean values as well as the temperature ranges over which these values are applicable. Most values of α found in the literature are room temperature values; and from a practical point of view, it would be incorrect to use these values when considering an application for a different temperature range.

34.10 EFFECT OF CRYSTAL STRUCTURE ON α

Cubic crystals such as MgO are isotropic because they have uniform thermal expansion along the three crystallographic axes. Single crystals of noncubic structures are anisotropic and have different values of α along different crystallographic directions. Some examples are given in Table 34.10. In a polycrystalline sample of an anisotropic material such as Al_2O_3 , α would be intermediate between the single-crystal values for each of the different orientations.

Some silicate minerals, such as quartz (SiO_2) and cordierite ($\text{Mg}_2\text{Al}_4\text{Si}_5\text{O}_{18}$), have very low coefficients of thermal expansion (for cordierite, α is actually negative along

TABLE 34.9 Mean Thermal Expansion Coefficients of Various Ceramics

Ceramic	$\alpha(^{\circ}\text{C}^{-1}) \times 10^6$	Ceramic	$\alpha(^{\circ}\text{C}^{-1}) \times 10^6$
Binary oxides			
$\alpha\text{-Al}_2\text{O}_3$	7.2–8.8	ThO ₂	9.2
BaO	17.8	TiO ₂	8.5
BeO	8.5–9.0 (25–1,000)	UO ₂	10.0
Bi ₂ O ₃ (α)	14.0 (RT–730°C)	WO ₂	9.3 (25–1,000)
Bi ₂ O ₃ (δ)	24.0 (650–825°C)	Y ₂ O ₃	8.0 (<i>c</i> axis)
Dy ₂ O ₃	8.5	ZnO	4.0 (<i>a</i> axis)
Gd ₂ O ₃	10.5	ZrO ₂ (monoclinic)	7.0
HfO ₂	9.4–12.5	ZrO ₂ (tetragonal)	12.0
MgO	13.5		
Mixed oxides			
Al ₂ O ₃ · TiO ₂	9.7 (average)	Cordierite	2.1
Al ₂ O ₃ · MgO	7.6	MgO · SiO ₂	10.8 (25–1,000)
5Al ₂ O ₃ · 3Y ₂ O ₃	8.0 (25–1,400)	2MgO · SiO ₂	11.0 (25–1,000)
BaO · ZrO ₂	8.5 (25–1,000)	MgO · TiO ₂	7.9 (25–1,000)
BeO · Al ₂ O ₃	6.2–6.7	MgO · ZrO ₂	12.0 (25–1,000)
CaO · HfO ₂	3.3 (25–1,000)	2SiO ₂ · 3Al ₂ O ₃ (mullite)	5.1 (25–1,000)
CaO · SiO ₂ (β)	5.9 (25–700)	SiO ₂ · ZrO ₂ (zircon)	4.5 (25–1,000)
CaO · SiO ₂ (α)	11.2 (25–700)	SrO · TiO ₂	9.4 (25–1,000)
CaO · TiO ₂	14.1	SrO · ZrO ₂	9.6
CaO · ZrO ₂	10.5	TiO ₂ · ZrO ₂	7.9 (25–1,000)
2CaO · SiO ₂ (β)	14.4 (25–1,000)		
Borides, nitrides, carbides, and silicides			
AlN	5.6 (25–1,000)	SiC	4.3–4.8
B ₄ C	5.5	TaC	6.3
BN	4.4	TiB ₂	7.8
Cr ₃ C ₂	10.3	TiC	7.7–9.5
HfB ₂	5.0	TiN	9.4
HfC	6.6	TiSi ₂	10.5
MoSi ₂	8.5	ZrB ₂	5.7–7.0
$\beta\text{-Mo}_2\text{C}$	7.8	ZrC	6.9 (25–1,000)
NbC	6.6	ZrSi ₂	7.6 (25–2,700)
Si ₃ N ₄	3.1–3.7	ZrN	7.2
Halides			
CaF ₂	24.0	LiCl	12.2
LiF	9.2	Lil	16.7
LiBr	14.0	MgF ₂	16.0
		NaCl	11.0
Glasses			
Soda-lime glass	9.0	Fused silica	0.55
Pyrex	3.2		

the *c* axis!). This property is attributed to the very open three-dimensional structure of many silicates. Cordierite is a ring silicate made up of [SiO₄]⁴⁻ tetrahedral, as we described in Chapter 7. During heating, thermal energy can be absorbed by rearrangement of these tetrahedral units by tilting or rotating.

Structural changes that occur in a ceramic during heating can also produce a change in α . An example is shown in Figure 34.13 for BaTiO₃. Similar changes are seen in the crystalline forms of SiO₂. Displacive phase transformations usually produce sudden changes in α . Reconstructive phase changes, which involve bond

breaking, usually occur more slowly and are often characterized by hysteresis.

34.11 THERMAL EXPANSION MEASUREMENT

The usual method of measuring α is to record mechanically the change in length of a test piece as it is heated in an instrument called a push-rod dilatometer, which is illustrated in Figure 34.14. The data obtained are plotted

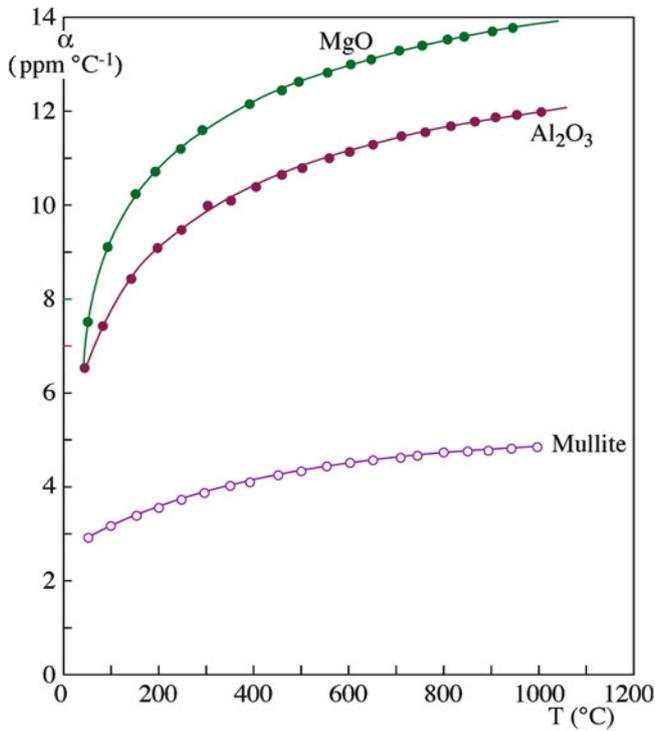


FIGURE 34.12. Thermal expansion coefficients versus temperature for some ceramic oxides.

TABLE 34.10 Thermal Expansion Coefficients for Some Anisotropic Crystals ($\alpha \times 10^{-6} \text{ } ^\circ\text{C}^{-1}$)

Crystal	Normal to <i>c</i> -axis	Parallel to <i>c</i> -axis
Al ₂ O ₃	8.3	9.0
Al ₂ TiO ₅	-2.6	+11.5
3Al ₂ O ₃ · 2SiO ₂	4.5	5.7
TiO ₂	6.8	8.3
ZrSiO ₄	3.7	6.2
CaCO ₃	-6.0	25.0
SiO ₂ (quartz)	14.0	9.0
NaAlSi ₃ O ₈ (albite)	4.0	13.0
C (graphite)	1.0	27.0

as $\Delta l/l_0$ versus temperature, as shown in Figure 34.15. The slope of a line at any temperature is α . Accuracies of commercial dilatometers can be as good as 0.5%.

A typical plot of $\Delta l/l_0$ versus temperature for a commercial silicate glass is shown in Figure 34.16. The sudden increase in α in the temperature range 500–600°C is associated with the change from the glassy state to the supercooled liquid (i.e., T_g). The temperature range over which this change occurs depends not only on the glass composition but also on the thermal history of the glass and the rate of heating (remember T_g is not an absolute value). The decrease in length at about 700°C corresponds to the dilatometric softening temperature (T_d), which is due to viscous flow of the sample under the stresses imposed by the dilatometer. Measurement of α for a glass should always be done on well-annealed samples.

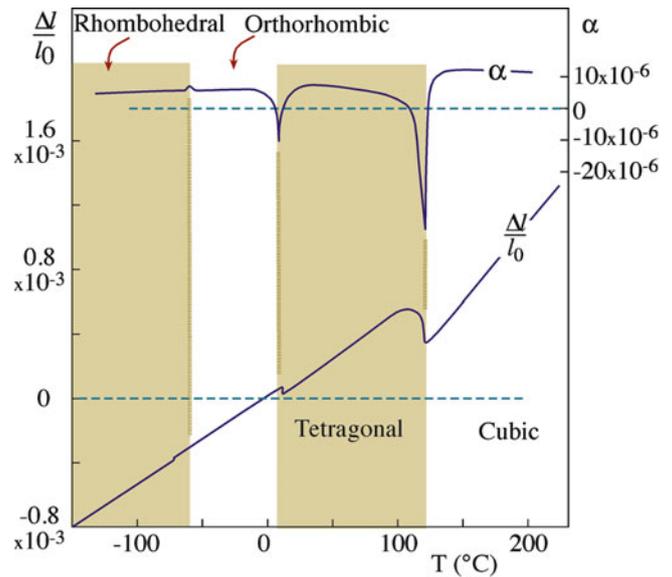


FIGURE 34.13. Coefficient of thermal expansion of BaTiO₃ as a function of temperature.

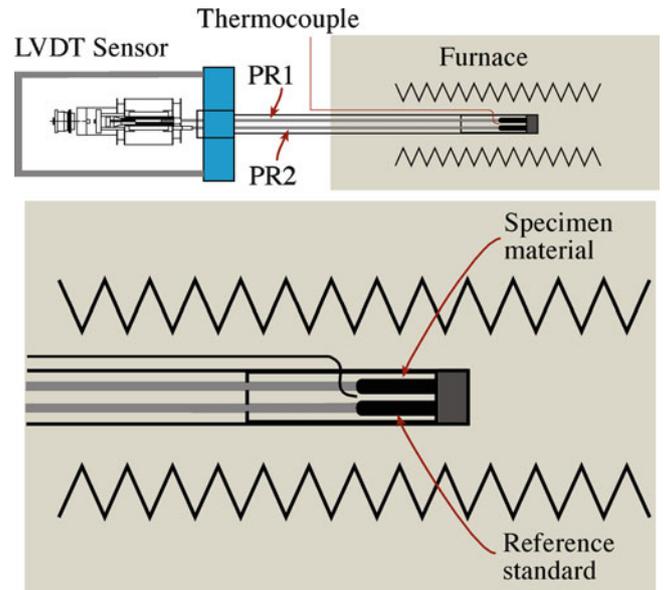


FIGURE 34.14. Double push-rod differential dilatometer.

34.12 IMPORTANCE OF MATCHING α s

Thermal expansion plays a key role when two or more materials are combined in situations where they are subjected to changes in temperature. Consider the situation illustrated in Figure 34.17. On heating, material 1 (with the higher α) experiences a compressive stress during heating, whereas material 2 (with the lower α) experiences tensile stresses. On cooling back down, material 1 is in tension,

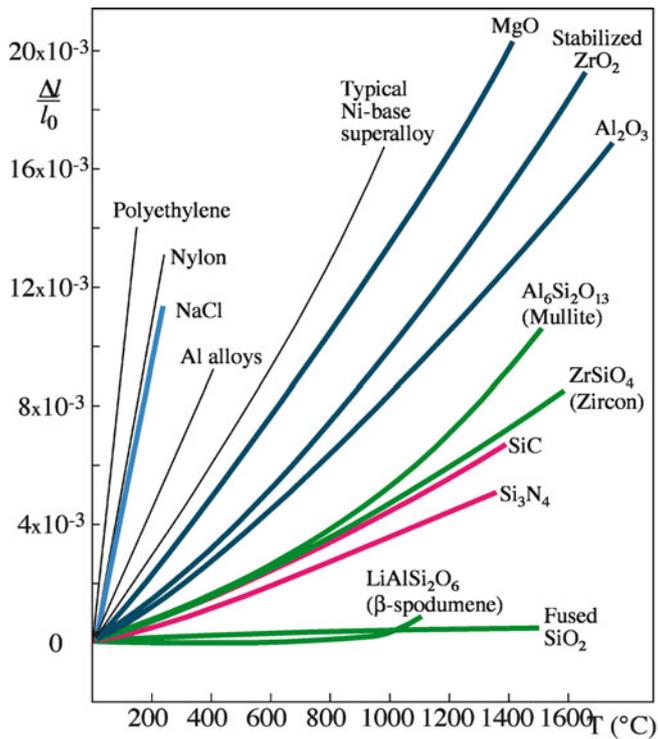


FIGURE 34.15. Thermal expansion characteristics of several polycrystalline ceramics.

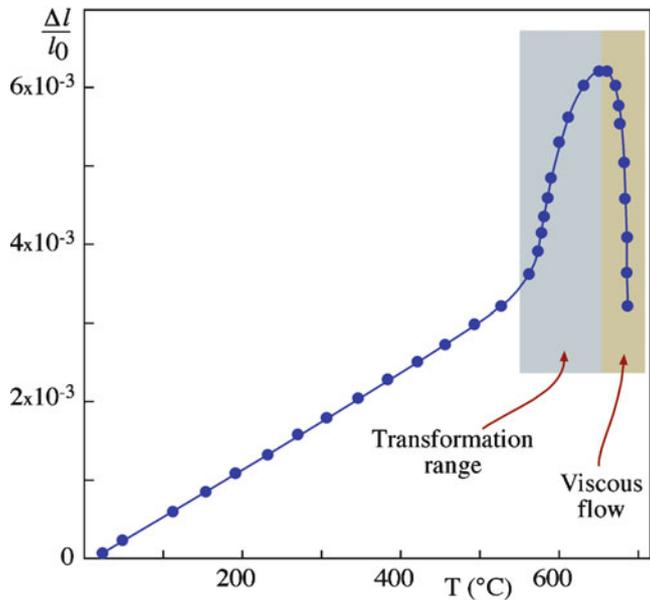


FIGURE 34.16. Typical data for thermal expansion of a commercial silicate glass.

whereas material 2 is in compression. These stresses can lead to:

- Bowing
- Delamination
- Cracking

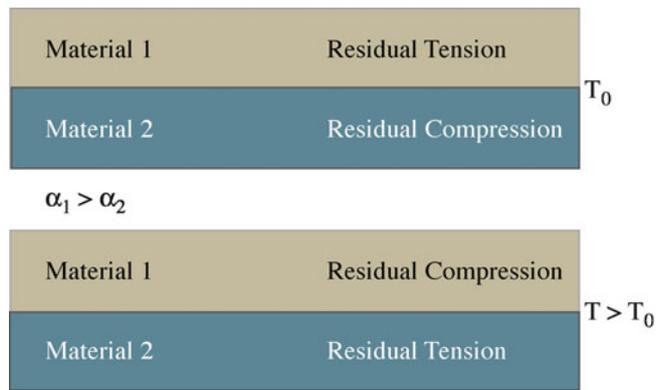


FIGURE 34.17. Stresses generated in a layered structure due to differences in α .

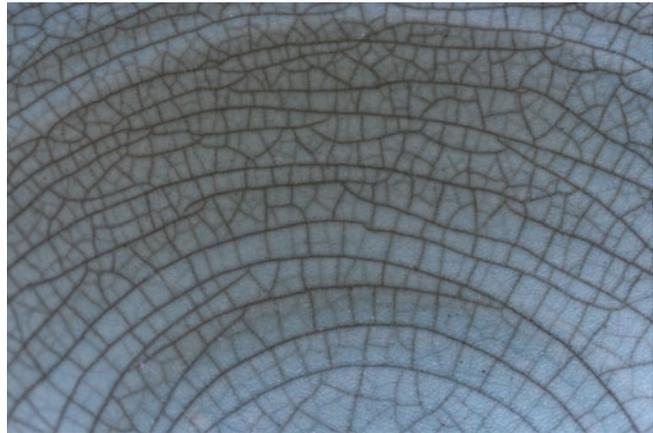


FIGURE 34.18. Artistic cracking in a glaze as a result of stresses generated due to differences in α .

Here are some important examples.

- *Glazes on ceramics.* Most types of pottery and whiteware are coated with a glaze for both aesthetic reasons and to make the body impermeable to liquids. The glaze (like most glasses) is strong in compression yet weak in tension. Typical compressive stresses in a glaze are on the order of 70 MPa. If tensile stresses are generated, they can cause cracking of the glaze, as illustrated in Figure 34.18.
- *Metal-to-ceramic bonding.* In the packaging of semiconductor devices, it is often necessary to join a ceramic (the substrate on which the “chip” is mounted) to a metal (the lead frame that provides connections to and from the outside world). The most common substrate material is a 96% wt% Al_2O_3 ceramic ($\alpha = 7.2 \times 10^{-6} \text{ }^\circ\text{C}^{-1}$). The Kovar metal alloys (e.g., 29% Ni, 17% Co, 54% Fe; $\alpha = 5.1 \times 10^{-6} \text{ }^\circ\text{C}^{-1}$) were developed to have α s as close as possible to that of alumina.
- *Glass-to-metal seals.* In incandescent lamps, the tungsten wire coil is fused to the glass lamp bulb to form a vacuum tight seal. The best seal is achieved when the

glass and metal have similar values of α . Tungsten has $\alpha = 4.5 \times 10^{-6} \text{ }^\circ\text{C}^{-1}$. A typical glass composition for matching with W is an alkali alumina borosilicate (72.9 SiO_2 , 4.5 Al_2O_3 , 14.5 B_2O_3 , 3.5 Na_2O , 2.4 K_2O , 1.2 BaO), which has $\alpha_{20-300^\circ\text{C}} = 4.5 \times 10^{-6} \text{ }^\circ\text{C}^{-1}$.

- **Porcelain-enameled metals.** Porcelain enameling is an established technology for bonding a coating of glass onto ferrous metal objects (e.g., stoves). The coefficient of thermal expansion of the glass must be closely matched to that of steel ($\alpha_{1,025 \text{ steel}} = 16 \times 10^{-6} \text{ }^\circ\text{C}^{-1}$).
- **Thin films.** Differences in α between a thin film and a substrate can lead to film stress. In a thin film (where the thickness of the film is considerably less than that of the substrate), the thermal stress, σ_f , in the thin film is

$$\sigma_f = \frac{(\alpha_s - \alpha_f)\Delta T E_f}{(1 - \nu_f)} \quad (34.26)$$

α_f and α_s are the coefficients of the normal expansion of the film and substrate, respectively; E_f is the Young's modulus of the film; and ν_f is the Poisson ratio.

EXAMPLE OF THERMAL STRESS

Determine the thermal stress in a TiC coating deposited onto 1025 stainless steel by CVD at $1,000^\circ\text{C}$

$$\begin{aligned} \alpha_{1025 \text{ steel}} &= 16 \times 10^{-6} \text{ }^\circ\text{C}^{-1} & \alpha_{\text{TiC}} &= 8 \times 10^{-6} \text{ }^\circ\text{C}^{-1} \\ E_{\text{TiC}} &= 450 \text{ GPa} & \nu_{\text{TiC}} &= 0.19 \end{aligned}$$

Substitution into equation 34.26 gives

$$\sigma_f = 1.67 \text{ GPa at } 0^\circ\text{C}$$

34.13 APPLICATIONS FOR LOW- α

Glass-ceramics, such as the lithium-alumino-silicates (LASs), can be designed to have very low, in fact near zero, α s over a wide temperature range, making them particularly suitable as supports for telescope mirrors. Telescopes are precise optical instruments, and the resolution is very sensitive to the alignment of the mirrors and

other optical components. Support materials with low α values minimize thermally induced strains. A commercial glass ceramic that is used for this application is known as Zerodur[®]. In addition to the very low α , Zerodur is stable up to 800°C and insensitive to thermal shock. The world's largest optical mirror is located at the Paranal Observatory in the Atacama Desert in Chile. The mirror, which is made of a polished Zerodur base coated with aluminum, is 8.2 m in diameter with a surface area of $> 50 \text{ m}^2$.

34.14 THERMAL SHOCK

Thermal shock resistance is the ability of a material to withstand failure due to rapid changes in temperature. Ceramics and glasses are much more likely to develop thermal stress than metals because:

- They generally have a lower k .
- They are brittle.

Rapid cooling of a ceramic or a glass is more likely to inflict thermal shock than heating because the induced surface stresses are tensile. Also, as you know, crack formation and propagation from surface flaws are more probable when the imposed stress is tensile.

The thermal shock resistance (R_{TS}) of a material can be estimated using:

$$R_{\text{TS}} = \sigma_f k / (E\alpha) \quad (34.27)$$

where σ_f is the fracture stress [which for ceramics is often taken as the flexural strength or modulus of rupture (MOR)], and E is Young's modulus. For high thermal shock resistance, we want a ceramic with:

- High σ_f
- High k
- Low E
- Low α

Values to calculate R_{TS} for several ceramics are given in Table 34.11. As an example, the R_{TS} of SiC is $2.3 \times 10^4 \text{ W/m}$, whereas that of Al_2O_3 is 740 W/m .

TABLE 34.11 Comparison of Thermal Shock Parameters for a Number of Ceramics^a

Material	MOR (MPa)	E (GPa)	α ($10^{-6} \text{ }^\circ\text{C}^{-1}$)	$k \text{ Wm}^{-1}\text{K}^{-1}$	R_{TS} (Wm^{-1})
SiAlON	945	300	3.0	21	22,050
Hot-pressed Si_3N_4	890	310	3.2	15–25	13,458
Reaction-bonded Si_3N_4	240	220	3.2	8–12	2,727
SiC (sintered)	483	410	4.3	84	23,012
Hot-pressed Al_2O_3	380	400	9.0	6–8	633
Hot-pressed BeO	200	400	8.5	63	3,706
PSZ	610	200	10.6	2	575

^aPoisson's ratio was taken to be 0.25 for all materials

Ceramics such as SiC and Si₃N₄, which also have high R_{TS} , are the most useful for components that are loaded at high temperature.

Silica glass (SiO₂) has an R_{TS} of 5.27×10^3 W/m. Addition of other components to the glass lowers both E and increases α , hence decreasing R_{TS} . Soda-lime-silicate glasses, such as those used for holding beverages, are very susceptible to thermal shock, as you have probably found out at one time or another, because of their high $\alpha = 9.2 \times 10^{-6} \text{ }^\circ\text{C}^{-1}$. Modification of R_{TS} can most easily be accomplished by changing α . The other parameters in equation 34.27 don't vary significantly with glass composition. If the CaO and Na₂O contents

are reduced and B₂O₃ is added, a borosilicate glass is formed. This is known as Pyrex™ glass ($\alpha = 3.3 \times 10^{-6} \text{ }^\circ\text{C}^{-1}$), which is much more resistant to thermal shock. Most cookware and the majority of laboratory glassware is Pyrex. From a practical point of view, a soda-lime-silicate glass fails if the temperature difference is $\geq 80^\circ\text{C}$ (pouring boiling water into a glass beaker can certainly crack it). Pyrex glass can withstand temperature differences of 270°C before failure. Glass-ceramics, with their extremely low α , have very high thermal stress resistance (TSR) and can withstand temperature changes of $>1,000^\circ\text{C}$.

CHAPTER SUMMARY

The thermal properties of ceramics, like many of their other physical properties, vary over a very wide range. A good example is that of thermal conductivity. Diamond, a ceramic material, has the highest known thermal conductivity, whereas the thermal conductivity of a multiphase ceramic such as partially stabilized zirconia is three orders of magnitude lower. Thermal properties of ceramics are dominated primarily by the nature of the interatomic bonding (bond strength and ionicity). In practical ceramics, we of course have to consider the presence of defects, impurities, and porosity, as they all affect thermal properties.

PEOPLE AND HISTORY

Debye, Petrus (Peter) Josephus Wilhelmus (1884–1966) was born in The Netherlands and became a naturalized American citizen in 1946. In 1912, he proposed the idea of quantized elastic waves, called phonons. From 1940 to 1952 Debye was Professor of Chemistry at Cornell University. He won the Nobel Prize in Chemistry in 1936.

Thomson, William (Lord Kelvin) (1824–1907) Scottish mathematician and physicist born in Belfast, Ireland. He proposed his absolute scale of temperature in 1848. During his lifetime he published more than 600 papers and was elected to the Royal Society in 1851. He is buried in Westminster Abbey next to Isaac Newton.

EXERCISES

- 34.1 Why do we use this title rather than the usual “Thermal Properties”?
- 34.2 Show that equation 34.4 gives energy in units of J.
- 34.3 The melting temperature of MgO is 3,073 K, whereas that of NaCl is 1,074 K. Explain the reason for this difference.
- 34.4 Consider the structure of graphite. Would you expect the thermal conductivity to be the same parallel to the basal plane and perpendicular to the basal plane? If not, why not?
- 34.5 (a) Would you expect the thermal conductivity of crystalline quartz to be higher or lower than that of fused quartz? (b) Would you expect the differences in k to increase or decrease with increasing temperature? Explain the reasoning behind your answers.
- 34.6 Using the criteria given in Section 34.5, rank the following ceramics in order of increasing thermal conductivity: B₄C, UO₂, TiO₂, and Si₃N₄. Explain the reasoning for your ranking.
- 34.7 Why is thermal transfer by radiation important only at high temperatures?
- 34.8 An AlN ceramic substrate contains 0.05 vol% porosity. Calculate the thermal conductivity of the ceramic at room temperature.
- 34.9 Which has the greater effect on the thermal conductivity of an AlN ceramic: 0.05 vol% porosity or 0.5 vol% of an Y₃Al₅O₁₂ second phase?
- 34.10 Would hot pressing or reaction bonding be the best method to produce Si₃N₄ components for applications in which sudden changes in temperature occur? Explain how you arrived at your answer.

- 34.11 Would the alkali alumina borosilicate glass given in Section 34.12 be a good choice to glaze a mullite crucible? If not, would you be better off using a soda-lime-silicate glaze or a pure silica glaze?
- 34.12 Use “book values” to compare the numerical heat capacities of the four ceramics in Figure 34.1. How can it rise above 3R?
- 34.13 The box on page 644 gives values for v and l for a ceramics and a metal. Why are they so different?
- 34.14 Explain why there is a variation in the data >800 K in Figure 34.3. Why there is a sharp maximum in this curve at low temperature?
- 34.15 Explain why the curves in Figure 34.4 are different for each material. Are there any trends? What materials would be used to obtain these curves? Explain your reasoning.
- 34.16 What conclusions can you deduce from the plot of α versus T in Figure 34.11?
- 34.17 The thermal expansion coefficients in Figure 34.12 all increase with temperature. Discuss what this means. In rare cases α can be negative. How can this happen, and could the phenomenon have useful applications?
- 34.18 What can you deduce from Figure 34.18? This requires real thought!
- 34.19 Zerodur is used at the Paranal Observatory. Could a similar material be used for the platter of a hard drive instead of glass? Explain your reasoning carefully.
- 34.20 Imagine you deposit a thin film of rock salt-structured oxide A (lattice parameter a) on a substrate of oxide B (lattice parameter $1.1a$) at 700°C . You then find that the thin film is in tension when it cools to room temperature. Explain what is happening.

GENERAL REFERENCES

- Berman R (1992) Ch. 7 Discusses the thermal conductivity of diamond and the effect different impurities have on this property. In: Field JE (ed) *The properties of diamond*. Academic, London
- Kingery WD, Bowen HK, Uhlmann DR (1976) *Introduction to ceramics*, 2nd edn. Wiley, New York, pp 583–645, A very detailed chapter on thermal properties. The discussion of photon conductivity and the thermal properties of glasses are covered in more depth than we do
- Lynch CT (ed) (1975) *CRC handbook of materials science*, vol III, Nonmetallic materials and applications. CRC Press, Cleveland, Relevant data for thin-film deposition are given on pp. 128–145. A useful resource for vapor pressures of various ceramics
- Rosenberg HM (1988) *The solid state*, 3rd edn. Oxford University Press, Oxford, pp 96–101, Has a clear discussion of phonon scattering mechanisms

SPECIFIC REFERENCES

- Debye P (1912) The theory of specific warmth. *Ann Phys* 39:789, An English translation of this classic paper appears in: *The Collected Papers of P.J.W. Debye*, (1954) Interscience, New York p. 650
- Debye P (1914) Vortäge über die Kinetische Theorie. B.G. Teubner, Leipzig, The original source. In German
- Hultgren R, Orr RL, Anderson PD, Kelley KK (1963) *Selected values of thermodynamic properties of metals and alloys*. Wiley, New York, Useful lists of thermodynamics properties
- Kubaschewski O, Evans ELL, Alcock CB (1967) *Metallurgical thermochemistry*, 4th edn. Pergamon Press, Oxford, More thermodynamics properties
- Nabarro FRN (1987) *Theory of crystal dislocations*. Dover, New York, pp 746–751, The Dover edition republishing the work first published in 1967
- Peierls R (1929) The kinetic theory of thermal conduction in crystals. *Ann Phys* 3:1055